

GEWA Digital Piano DP345

Update Guide

This manual will help you to update your GEWA digital piano DP345.
You will need a USB stick and the appropriate firmware to complete this update.

Update / Installation

Step 1

Save the firmware File on you USB stick and connect it to your digital piano.

Step 2

Push and hold down the two keys "lowest a and c-sharp" and switch on the digital piano to enter the update mode. (see picture)



Step 3

Select the firmware file with the "up / down" cursor buttons, then press the "left" cursor button to start the update process.

The update should only take a few seconds. Please do not switch off the digital piano during the process!

Step 4

The update is completed as soon as the progress bar has expired and the display shows the file browser again. Now you can turn off the piano by holding down the on/off switch. (This may take a moment)

Step 5

All updates will take effect when the digital piano is restarted.